

## Solution of the problem of incompatibility of the FLEX receiver with Ubiquity network devices.


The problem concerns one of Ubiquity's default access point settings, which blocks communication with low speed devices.

To solve the problem, enable the "Enable minimum data rate control" option for the network with which FLEX is to connect.

Due to the possible deterioration of WiFi network performance with the above option enabled, it is recommended to create a separate network to which the FLEX receiver will be connected.

Creating a new network compatible with the FLEX receiver:

1. Settings/Wireless Networks tab -> click "CREATE NEW WIRELESS NETWORK"
2. Enter the network name in the NAME/SSID field
3. Select the checkbox "Enable this wireless network"
4. "Security" set to "WPA Personal"
5. In the "Security Key" field, enter the password for the network being created
6. Expand "ADVANCED OPTIONS"
7. Then expand „802.11 RATE AND BEACON CONTROLS”
8. Check the box "Enable minimum data rate control"
9. Save settings ("SAVE" at the bottom of the page)

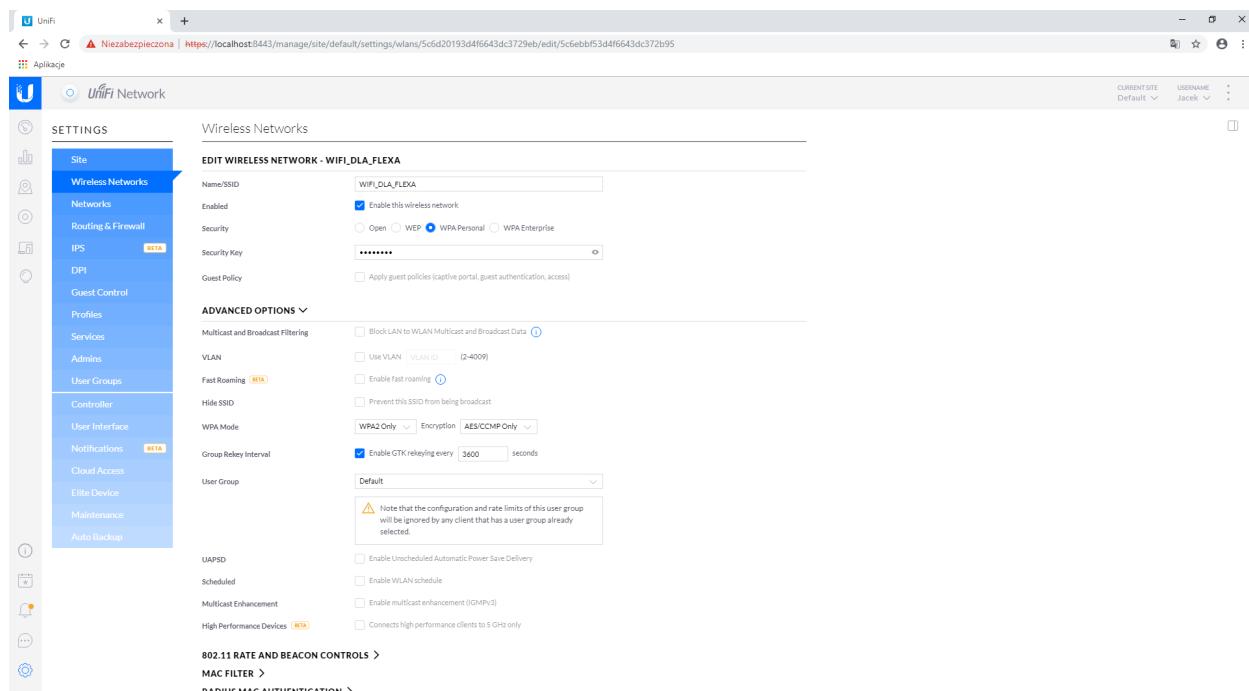

The screenshot shows the Unifi Network management interface. The left sidebar is titled 'SETTINGS' and contains the following sections: Site, Wireless Networks (selected), Networks, Routing & Firewall, IPS, DPI, Guest Control, Profiles, Services, Admins, and User Groups. The main content area is titled 'Wireless Networks' and shows configuration for a specific network. It includes sections for Fast Roaming, Hide SSID, WPA Mode (set to 'WPA2 Only'), Group Rekey Interval (set to 3600 seconds), User Group (set to 'Default'), UAPSD, Scheduled, Multicast Enhancement, and High Performance Devices. Below this is a section titled '802.11 RATE AND BEACON CONTROLS' which includes DTIM Mode, DTIM 2G Period, DTIM 5G Period, 2G Data Rate Control (with a slider from 1Mbps to 54Mbps), and 5G Data Rate Control. At the bottom of the main content area are links for 'MAC FILTER >' and 'RADIUS MAC AUTHENTICATION >'. The top right corner shows 'CURRENT SITE Default', 'USERNAME Jacek', and a user icon.

📞 +48 52 340 15 83

📠 +48 52 568 45 98

✉ biuro@dtm.pl

🌐 www.dtm.pl

**DTM System spółka z ograniczoną odpowiedzialnością spółka komandytowa, ul. Brzeska 7, 85-145 Bydgoszcz**  
NIP: PL9532648396, KRS: 0000549181, Sąd Rejonowy w Bydgoszczy, XIII Wydział Gospodarczy KRS